

## **JTAG Adapters and Interposers**

JTAG adapters and interposers fit on the end of personality modules or flex cables that runs from the emulator to a device under test (target). These products may be purchased separately and can be used with Arium SourcePoint JTAG debuggers (emulators) for ARM and Intel respectively.

## JTAG Test Access Ports, Adapters, & Reference Boards

A STREET OF	ARM-MINIT Cortex small form factor JTAG adapter with 4-bit trace (38-pin Mictor to mini 20-pin with trace)
Constant of the second se	ARM-MICT Mictor JTAG adapter (20-pin to 38-pin Mictor)
Willierenter	ARM-NVDA ARM to Nvidia Harmony JTAG adapter (20-pin mini to 22-pin)
	ARM-TI-ADP ARM to TI OMAP adapter

ARIUM ASSY 910-25178	<b>XDP-SFF-26</b> 26->60-pin adapter to small ITP JTAG port. For boards with debug ports whose pins lie parallel to the board. For use with ECM-50/PBD-XDP, ECM-XDP, and ECM- XDP3.
PB-057619-051	XDP-SFF-24 24->60-pin adapter to small ITP JTAG port. For boards with debug ports whose pins lie parallel to the board. For use with ECM-50/PBD-XDP, ECM-XDP, and ECM- XDP3.
	<b>ITP-FLXXDP</b> 28->60-pin adapter to small ITP JTAG portFor boards with debug ports whose pins lie parallel to the board. For use with ECM-50/PBD-XDP, ECM-XDP, and ECM- XDP3.
	ITP-FLX 25->28-pin adapter to small ITP JTAG port. For boards with debug ports whose pins lie parallel to the board. For use with ECM-50/PBD-700/700M.

DISTRIBUTOR FLASH TECHNOLOGY PTE LTD Website : www.flashtech.com.sg Email : sales\_sg@flashtech.com.sg Tel : +65 6749 6168