## ProgMaster-U8 Universal Gang Programmer

## ProgMaster-U8

is a new generation universal gang programmer with ultra high speed and it completely can support all IC families on the market. Equipped with 8 programming sites.

ProgMaster-U8 has been designed and optimized to reach the IC maximum performances without compromise on the

programming quality, stability and reliability making it the

Features

High programming speed

best value for mass production.

Built in high speed processor to achieve high programming speed. Timing reference(P+V):

NAND256W3A2BNB 43s STM8S105K6 11s S29AL016J70TFI01 22s W25X16VSIG 18s

- Completely support all IC families and packages
  - Support EEPROM \ SPI/NOR/NAND/SPI NAND FLASH \ Microcontroller \ eMMC \
     eMCP \ SD Card \ CPLD \ FPGA, etc
  - 2. Support DIP \ SOP \ SSOP \ TSOP \ PLCC \ QFN \ LQFP \ BGA package, etc
  - 3. Regular device update
- Software supports NAND FLASH skip Bad Block and partition programming
- Able to perform stand alone programming when programming SPI/ NOR FLASH and eMMC

User can use Dediware software to generate work project and store it in the memory card. Then, ProgMaster-U8 can work with LCD Keypad to perform stand alone programming and no need to be connected to PC.

- Each PC can connect unlimited number of ProgMaster-U8 at the same time
- Provide remote control API
   User can use 3<sup>rd</sup> party software to control the programmer through Windows command line
- Especially designed for the purpose of mass production to increase throughput
  - 1. User directly presses Start button to execute programming after loading work project; avoid human errors like loading wrong file and selecting wrong IC
  - 2.3 advanced working modes:
    - A. Manual Start Mode: Press "Start Button" to execute programming after inserting IC in all sockets.
    - B. Auto-Socket Start Mode: Each socket works independently. Programming is executed instantly after inserting IC to socket.
    - C. Auto-Cartridge Start Mode: Programming automatically starts when inserting IC in all sockets.



Multiple-ProgMaster-U8



Support different IC packages



Dediprog Technology Co., Ltd (Taiwan) TEL: 886-2-2790-7932 FAX: 886-2-2790-7916
4F., No.7, Ln. 143, Xinming Rd., Neihu Dist., Taipei City 114, Taiwan

## ProgMaster-U8 Universal Gang Programmer

Specification

Architecture —	ARM and FPGA architecture with high density SDRAM
Supported IC —	EEPROM \ SPI/NOR/NAND/SPI NAND FLASH \ Microcontroller \ eMMC \ eMCP \ SD Card \ CPLD \ FPGA
Hardware Interface	1. Start button 2. LED power indicator 3. Pass/Busy/Error LED
Socket Adaptor —	DIP \ SOP \ SSOP \ TSOP \ PLCC \ QFN \ LQFP \ BGA etc.
Communication —	High speed USB2.0: 480MB/s
Stand Alone Mode —	Work with LCD Keypad to program SPI/ NOR FLASH \ eMMC without PC
Ram Buffer —	2Gb RAM
External Memory Card —	64GB SD Card
Hardware Protection —	Auto diagnose hardware function when power on     Overheat \ overvoltage \ under current and ESD protections
Dimension & Weight —	1. Dimension: 285mm x 165mm x 53mm 2. Weight: 1.51 Kg
External Power —	Input: 100~240V AC Frequency: 50/60Hz Consumption: 15V*3A (45W)
Operation Environment —	Altitude: >5000m Humidity: 20~70% Temperature: +5°C~+40°C
Software —	
Programming Software Programing Function File Type Supported PC System Requirements	DediWare Engineer & DediWare Production  Blank check ` Erase ` Program ` Verify ` Read Checksum ` Edit ` Compare  Binary ` Hex ` Intel ` Motorola ` ROM ` Tekhex ` Extended Tekhex ` ASCII, etc  Windows XP/Vista/7/8 32/64bit
Standard Accessories —	1. ProgMaster-U8 *1 2. USB Cable *1 3. Power Cable *1 4. 32GB SD Memory Card *1 5. CD-ROM (Include Dediware software and user manual) *1
Optional Accessories —	1. Socket Adaptor 2. 64GB SD card 3. LCD Keypad

Dediprog Technology Co., Ltd (Taiwan) TEL: 886-2-2790-7932 FAX: 886-2-2790-7916 4F., No.7, Ln. 143, Xinming Rd., Neihu Dist., Taipei City 114, Taiwan



Room 503, Block E, No.1618, Yishan Road, Shanghai, China

www.dediprog.com E-Mail: sales@dediprog.com

